

PRODUCT EVOLUTION



Be careful, our check valves Ref.326-327 are changing

We currently have 2 different types available (according to DN) with different dimensions and looks

Old type:



New type:



At the end, only the new type will be available (from page 2 to 7)

 $Sferaco\ 90\ rue\ du\ Ruisseau\ 38297\ St\ Quentin\ Fallavier\ \ Tel: +33\ (0)\ 474.94.15.90\ Fax: +33\ (0)\ 474.95.62.08\ \ Internet: \\ \underline{www.sferaco.fr} \ E-mail: \\ \underline{sferaco@sferaco.fr} \ E-mail: \\ \underline{sferaco.fr} \ E-mail: \\ \underline{sferaco.f$









Size: DN 1/4" to 4"

Ends: Female-Female BSP

Min Temperature : - 10°C Max Temperature : + 150°C Max Pressure : 16 Bars

Specifications: Disc check valve

All positions Short length

Materials: Stainless steel



SPECIFICATIONS:

- Stainless steel stamped check valve
- All positions (respect the flow direction indicated by the arrow)
- · Short length
- Minimum backpressure for tightness: 0.5 bar up to DN1"1/2, 1 bar from DN2" to DN4"

USE:

· Chemical and pharmaceutical industries, petrochemical industries, hydraulic installation, compressed air

Max Temperature Ts: - 10°C
 Min Temperature Ts: + 150°C
 Max Pressure Ps: 16 bars

OPENING PRESSURE (in mbar):


DN	Opening pressure (mbar)
1/4"	250
3/8"	250
1/2"	300
3/4"	350
1"	350
1"1/4	400
1"1/2	500
2"	500
2"1/2	700
3"	1000
4"	1000

RANGE:

- AISI 316 body Female / female BSP cylindrical threaded Ref. 326 from DN 1/4" to DN 4"
- AISI 304 body Female / female BSP cylindrical threaded Ref. 327 from DN 1/4" to DN 4"



MATERIALS:

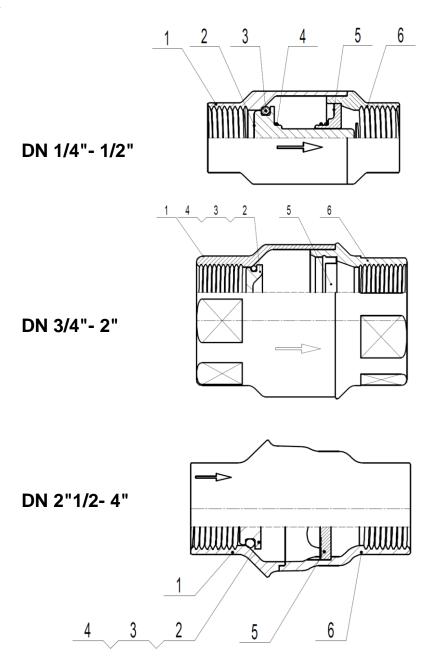


Item	Designation Materials Ref.326		Materials Ref.327	
1	Body	AISI 316	A1C1 204	
2	Disc	AISI 316	AISI 304	
3	Gasket	Green FPM	Green FPM	
4	Spring	A101 240	A1C1 204	
5-6	Seat and end	AISI 316	AISI 304	

 $Sferaco\ 90\ rue\ du\ Ruisseau\ 38297\ St\ Quentin\ Fallavier\ \ Tel: +33\ (0)\ 474.94.15.90\ Fax: +33\ (0)\ 474.95.62.08\ \ Internet: \\ \underline{www.sferaco.fr} \ E-mail: \\ \underline{sferaco@sferaco.fr} \ E-mail: \\ \underline{sferaco.fr} \ E-mail: \\ \underline{sferaco.f$




SIZE DN 1/4 - 1/2" (in mm):

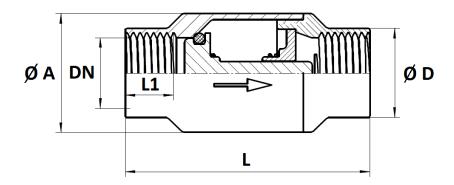

DN	1/4" 3/8"		1/2"
L	66	66	66
L1	13	13	13
Ø A	32	32	32
Ø D	18	22	24
Weight (in Kg)	0.15	0.16	0.15

SIZE DN 3/4 - 2" (in mm):

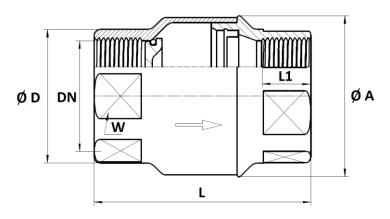


DN	3/4"	1"	1"1/4	1"1/2	2"
L	72	79	101	102	110
L1	14	11	11	11	11
Ø A	45	55	65	67	82
Ø D	33	39	49	56	68
w	30	36	45	52	64
Weight (in Kg)	0.27	0.39	0.66	0.79	1.05

 $Sferaco\ 90\ rue\ du\ Ruisseau\ 38297\ St\ Quentin\ Fallavier\ \ Tel: +33\ (0)\ 474.94.15.90\ Fax: +33\ (0)\ 474.95.62.08\ \ Internet: \\ \underline{www.sferaco.fr}\ E-mail: \underline{sferaco@sferaco.fr}\ Co.fr$

Date : 02/19 Rev.08
Page 5 sur 15



SIZE DN 2"1/2 - 4" (in mm):

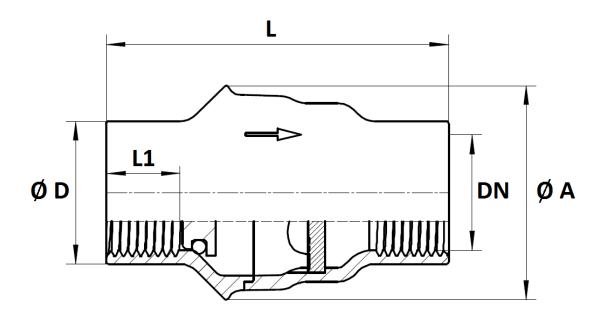

DN	2"1/2	3"	4"
L	145	162.5	189.5
L1	11	11	11
Ø A	109	132	168
Ø D	80	93	120
Weight (in Kg)	1.43	2.6	5.2

STANDARDS:

- Fabrication according to ISO 9001 : 2015
- DIRECTIVE 2014/68/EU: Products excluded from directive (Article 4, § 3)
- Threaded BSP cylindrical ends according to ISO 228-1

ADVICE: Our opinion and our advice are not guaranteed and SFERACO shall not be liable for the consequences of damages. The customer must check the right choice of the products with the real service conditions.

 $Sferaco\ 90\ rue\ du\ Ruisseau\ 38297\ St\ Quentin\ Fallavier\ \ Tel: +33\ (0)\ 474.94.15.90\ Fax: +33\ (0)\ 474.95.62.08\ \ Internet: \\ \underline{www.sferaco.fr}\ E-mail: \underline{sferaco@sferaco.fr}\$

Date: 02/19 Rev.08



INSTALLATION INSTRUCTIONS

GENERAL GUIDELINES:

- Ensure that the check valves to be used are appropriate for the conditions of the installation (type of fluid,pressure and temperature).
- Be sure to have enough valves to be able to isolate the sections of piping as well as the appropriate equipment for maintenance and repair.
- Ensure that the check valves to be installed are of correct strength to be able to support the capacity of their usage.
- Installation of all circuits should ensure that their function can be automatically tested on a regular basis (at least two times a year).

INSTALLATION INSTRUCTIONS:

- Before installing the check valves, clean and remove any objects from the pipes (in particular bits of sealing and metal) which could obstruct and block the check valves.
- Ensure that both connecting pipes either side of the check valve (upstream and downstream) are aligned (if they're not, the valves may not work correctly).
- Make sure that the two sections of the pipe (upstream and downstream) match, the check valve unit
 will not absorb any gaps. Any distortions in the pipes may affect the thightness of the connection,
 the working of the check valve and can even cause a rupture. To be sure, place the kit in position to
 ensure the assembling will work.
- During welding operation, be sure to not exceed 200°C
- If sections of piping do not have their final support in place, they should be temporarily fixed. This is to avoid unnecessary strain on the check valve.
- · Fluids in the check valve must not contain solid objects (it could damaged the seat).
- If there is a direction changing or if there's another material, it's better to take away the check valve so that it is outside the turbulence area (**between 3 and 5 times the ND before and after**).
- After a pump please refer to FD CEN/TR 13932 to install the check valve :
 - If it is essential to keep priming the pump, a non-return check valve can be fitted to the suction pipe at a distance L1 (straight length suction) > 10xD1 (diameter suction)

The check valve is designed to meet the maximum flow rate in service

• In other cases, the non-return check valve is mounted on the discharge pipe at a distance of L2 (straight length at discharge) > 3xD2 (diameter at discharge)

Sferaco 90 rue du Ruisseau 38297 St Quentin Fallavier Tel: + 33 (0) 474.94.15.90 Fax: + 33 (0) 474.95.62.08 Internet: www.sferaco.fr E-mail: sferaco@sferaco.fr

Date: 02/19 Rev.08







Size: DN 1/4" to 4"

Ends: Female-Female BSP

Min Temperature: - 10°C Max Temperature: + 150°C Max Pressure: 16 Bars

Specifications: Disc check valve

All positions Short length

Materials: Stainless steel



SPECIFICATIONS:

- Stainless steel stamped check valve
- All positions (respect the flow direction indicated by the arrow)
- · Short length
- Minimum backpressure for tightness: 0.5 bar up to DN1"1/2, 1 bar from DN2" to DN4"

USE:

· Chemical and pharmaceutical industries, petrochemical industries, hydraulic installation, compressed air

Max Temperature Ts: - 10°C
 Min Temperature Ts: + 150°C
 Max Pressure Ps: 16 bars

OPENING PRESSURE (in mbar):


DN	Opening pressure (mbar)
1/4"	100
3/8"	100
1/2"	100
3/4"	200
1"	200
1"1/4	300
1"1/2	400
2"	450
2"1/2	700
3"	1000
4"	1000

RANGE:

- SS 316 body Female / female BSP cylindrical threaded Ref. 326 from DN 1/4" to DN 4"
- SS 304 body Female / female BSP cylindrical threaded Ref. 327 from DN 1/4" to DN 4"




MATERIALS DN 1/4-1/2":

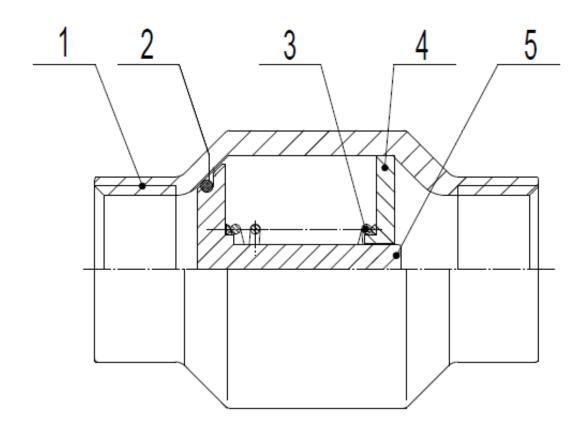

Item	Designation	Materials Ref.326	Materials Ref.327
1	Body	SS 316	SS 304
2	Gasket	Black FKM	Black FKM
3	Spring	SS 316	SS 304
4	Holder	SS 316	SS 304
5	Stem + Disc	SS 316	SS 304




MATERIALS DN 3/4-4" :

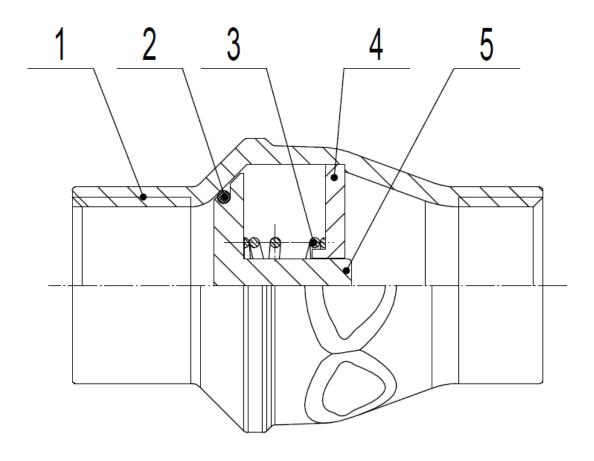

Item	Designation	Materials Ref.326	Materials Ref.327
1	Body	SS 316	SS 304
2	Gasket	Black FKM	Black FKM
3	Spring SS 316		SS 304
4	Holder	SS 316	SS 304
5	Stem + Disc	SS 316	SS 304



SIZE DN 1/4 - 1/2" (in mm):

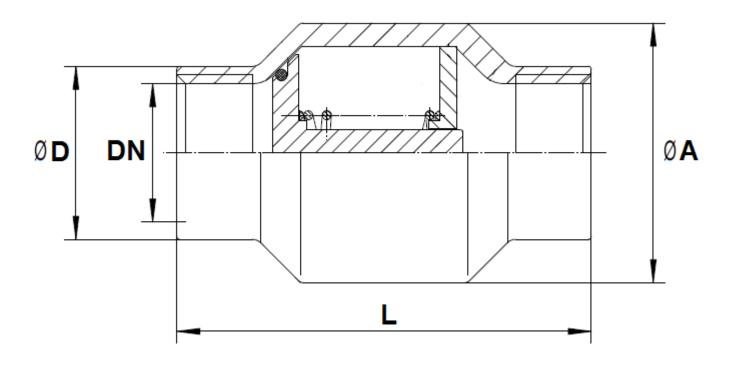


Ref.	DN	1/4"	3/8"	1/2"
	L		66	66
326-327	Ø A	32	32	32
	Ø D	18	22	24
326	Weight (in Kg)	0.13	0.14	0.13
327	Weight (in Kg)	0.12	0.11	0.12

Sferaco 90 rue du Ruisseau 38297 St Quentin Fallavier Tel: + 33 (0) 474.94.15.90 Fax: + 33 (0) 474.95.62.08 Internet: $\underline{www.sferaco.fr}$ E-mail: $\underline{sferaco@sferaco.fr}$

Date : 02/19 Rev.08
Page 12 sur 15



SIZE DN 3/4 - 4" (in mm) :

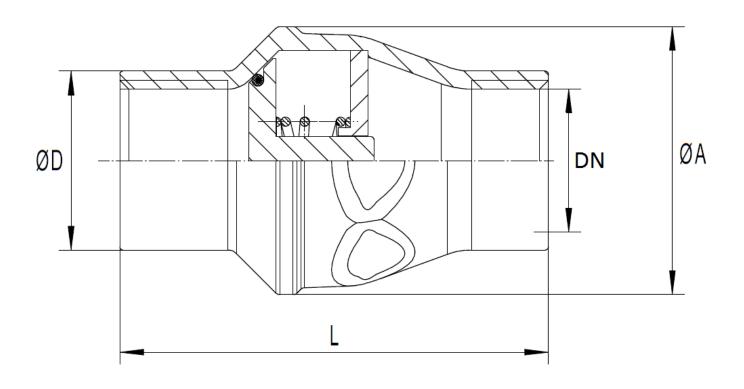

Ref.	DN	3/4"	1"	1"1/4	1"1/2	2"	2"1/2	3"	4"
	L	72	83	105	115	125	145	162.5	189.5
326-327	Ø A	45	55	70	76	89	109	132	168
	Ø D	30	36	45.5	51	64	80	93	120
326	Weight (Kg)	0.18	0.26	0.53	0.64	1.03	1.43	2.6	5.2
327	Weight (Kg)	0.16	0.23	0.48	0.57	0.94	1.30	2.6	5.2

 $Sferaco\ 90\ rue\ du\ Ruisseau\ 38297\ St\ Quentin\ Fallavier\ \ Tel: +33\ (0)\ 474.94.15.90\ Fax: +33\ (0)\ 474.95.62.08\ \ Internet: \\ \underline{www.sferaco.fr} \ E-mail: \\ \underline{sferaco@sferaco.fr} \ E-mail: \\ \underline{sferaco.fr} \ E-mail: \\ \underline{sferaco.f$

Date: 02/19 Rev.08



STANDARDS:

• F	abrication	according	to IS	SO 9	001:	2015
-----	------------	-----------	-------	------	------	------

- DIRECTIVE 2014/68/EU: Products excluded from directive (Article 4, § 3)
- Threaded BSP cylindrical ends according to ISO 228-1

ADVICE : Our opinion and our advice are not guaranteed and SFERACO shall not be liable for the consequences of damages. The customer must check the right choice of the products with the real service conditions.

 $Sferaco\ 90\ rue\ du\ Ruisseau\ 38297\ St\ Quentin\ Fallavier\ \ Tel: +33\ (0)\ 474.94.15.90\ Fax: +33\ (0)\ 474.95.62.08\ \ Internet: \\ \underline{www.sferaco.fr} \ E-mail: \\ \underline{sferaco@sferaco.fr} \ E-mail: \\ \underline{sferaco.fr} \ E-mail: \\ \underline{sfe$



INSTALLATION INSTRUCTIONS

GENERAL GUIDELINES:

- Ensure that the check valves to be used are appropriate for the conditions of the installation (type of fluid,pressure and temperature).
- Be sure to have enough valves to be able to isolate the sections of piping as well as the appropriate
 equipment for maintenance and repair.
- Ensure that the check valves to be installed are of correct strength to be able to support the capacity of their usage.
- Installation of all circuits should ensure that their function can be automatically tested on a regular basis (at least two times a year).

INSTALLATION INSTRUCTIONS:

- Before installing the check valves, clean and remove any objects from the pipes (in particular bits of sealing and metal) which could obstruct and block the check valves.
- Ensure that both connecting pipes either side of the check valve (upstream and downstream) are aligned (if they're not,the valves may not work correctly).
- Make sure that the two sections of the pipe (upstream and downstream) match, the check valve unit
 will not absorb any gaps. Any distortions in the pipes may affect the thightness of the connection,
 the working of the check valve and can even cause a rupture. To be sure, place the kit in position to
 ensure the assembling will work.
- During welding operation, be sure to not exceed 200°C
- If sections of piping do not have their final support in place, they should be temporarily fixed. This is to avoid unnecessary strain on the check valve.
- Fluids in the check valve must not contain solid objects (it could damaged the seat).
- If there is a direction changing or if there's another material, it's better to take away the check valve so that it is outside the turbulence area (**between 3 and 5 times the ND before and after**).
- After a pump please refer to FD CEN/TR 13932 to install the check valve :
 - If it is essential to keep priming the pump, a non-return check valve can be fitted to the suction pipe at a distance L1 (straight length suction) > 10xD1 (diameter suction)

The check valve is designed to meet the maximum flow rate in service

• In other cases, the non-return check valve is mounted on the discharge pipe at a distance of L2 (straight length at discharge) > 3xD2 (diameter at discharge)

Sferaco 90 rue du Ruisseau 38297 St Quentin Fallavier Tel: + 33 (0) 474.94.15.90 Fax: + 33 (0) 474.95.62.08 Internet: www.sferaco.fr E-mail: sferaco@sferaco.fr

Date : 02/19 Rev.08
Page 15 sur 15